


DRILL ATTACHMENT SHIPPING

PETRA
DRILLING SUPPLY

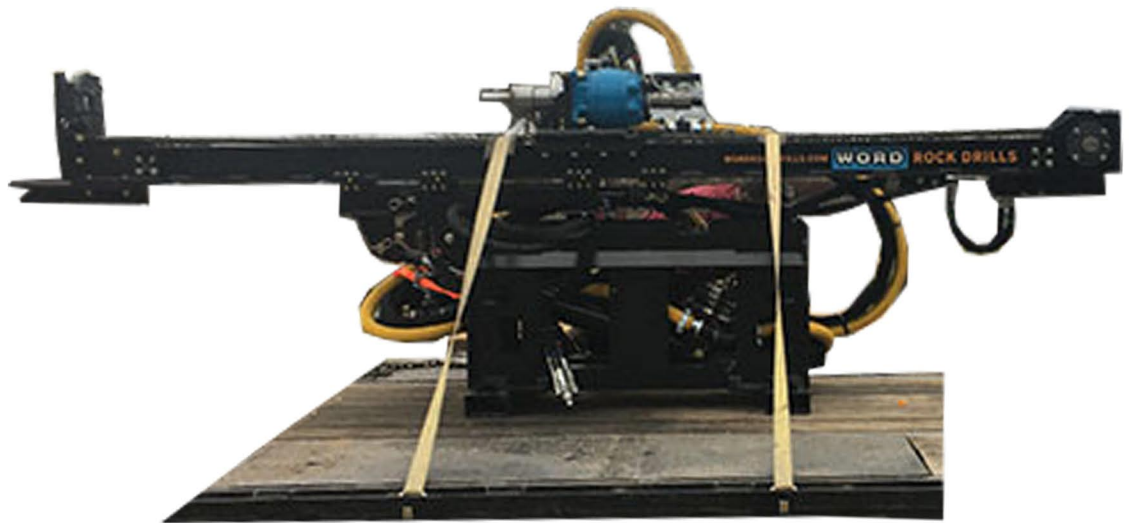


FULLY RETRACT THE FEED EXTEND CYLINDER



CENTER ROTARY HEAD ON THE MAST IF TOOLING HAS BEEN REMOVED



PLACE STRAPS AROUND THE MAST

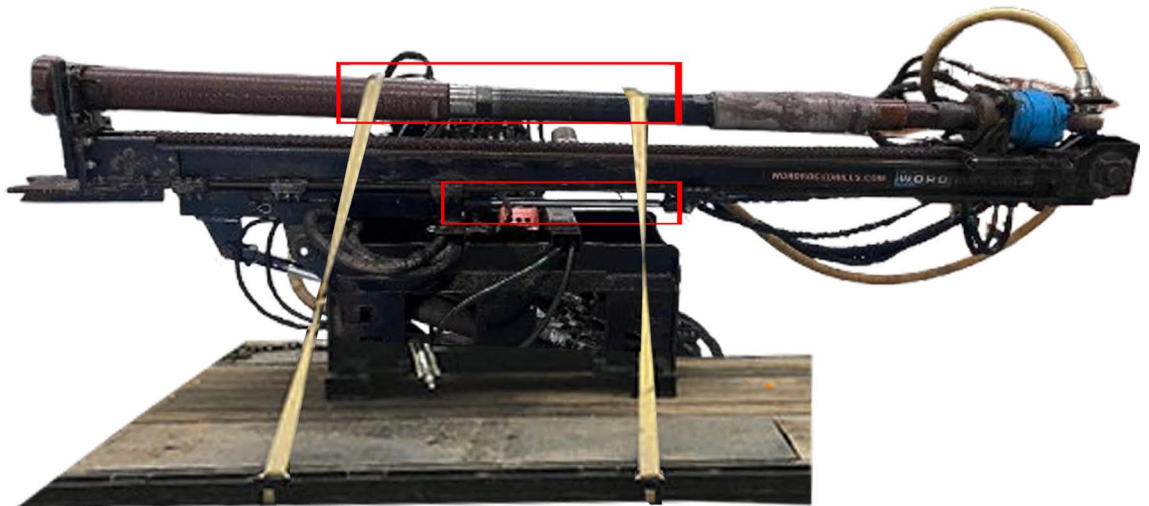

DO NOT LEAVE FEED EXTEND CYLINDER EXTENDED



WHEN SHIPPING TOOLING DO NOT STRAP OVER THE TOOLING

CONTACT US WITH ANY QUESTIONS

541-844-6890 | BRODY@PETRADRILLINGSUPPLY.COM

541-968-7129 | CLINTON@PETRADRILLINGSUPPLY.COM